

Base adapters


Specifications

By using a base adapter, the MELSEC iQ-R series base unit and the conversion adapter support flange can be installed at the same time without drilling any additional installation holes.

The same base adapters used to replace the MELSEC-A series with the MELSEC iQ-R series are used.

Note

- Four additional installation holes (M5 screw size) and four M5 screws need to be prepared by the user to install the base adapter to the control panel.
(There may be a case that drilling of additional installation holes is not required if the installation dimensions of all the four holes are the same before and after replacement.)

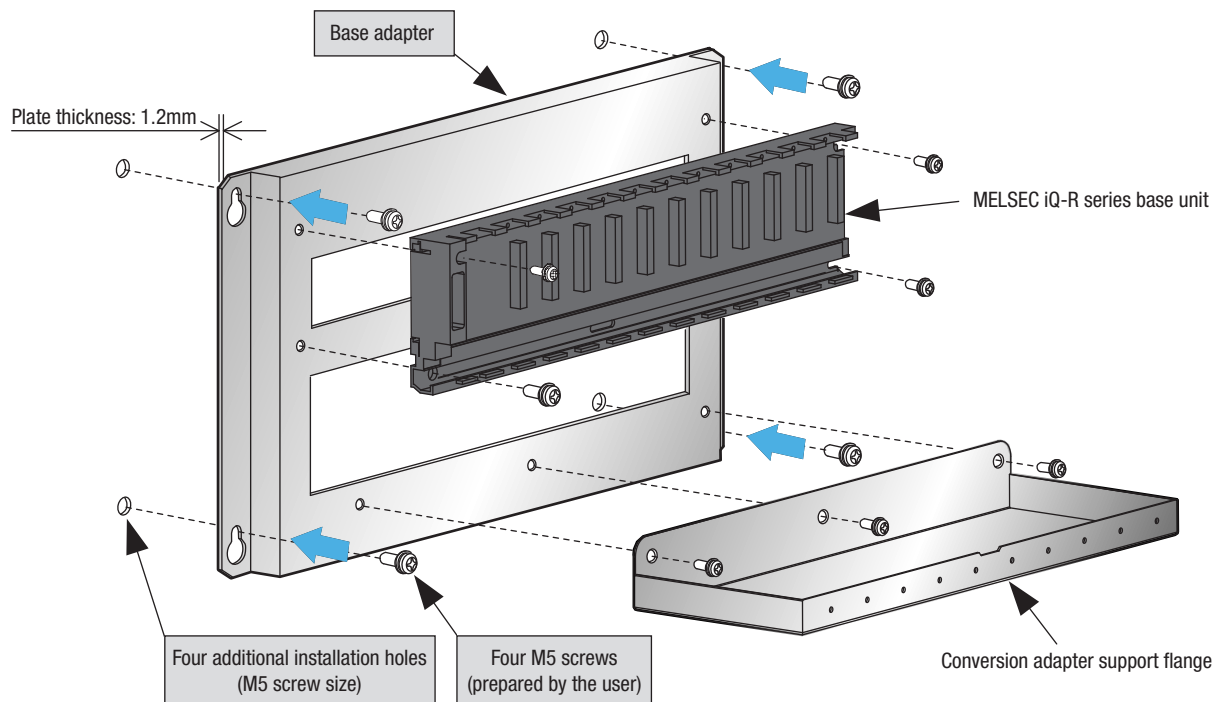

The base units (*1 to *3) can be installed to different types of base adapters. Select the optimum base adapter.

Base adapter model	Installable product						Dimensions
	MELSEC iQ-R series base unit					Conversion adapter support flange	Width × Height (mm)
	12-slot	10-slot	8-slot	5-slot	3-slot		
ERNT-AQB38N	R312B	R310B-HT				ERNT-1AR12F	480 × 240
						ERNT-1AR10F3	
			R38B ^{*1}			ERNT-1AR8F	
ERNT-AQB35N			R38B ^{*1}	R35B		ERNT-1AR8F	382 × 240
						ERNT-1AR5F	
ERNT-AQB32N					R33B	ERNT-1AR5F	247 × 240
ERNT-AQB68N	R612B	R610B-HT				ERNT-1AR12F	466 × 240
						ERNT-1AR10F6	
			R68B ^{*2}			ERNT-1AR8F	
ERNT-AQB65N			R68B ^{*2}	R65B ^{*3}		ERNT-1AR8F	352 × 240
						ERNT-1AR5F	
ERNT-AQB58N			R68B ^{*2}			ERNT-1AR8F	411 × 240
ERNT-AQB55N				R65B ^{*3}		ERNT-1AR5F	297 × 240