

Base adapters


Specifications

By using a base adapter, the MELSEC iQ-R series base unit and the conversion adapter support flange can be installed at the same time without drilling any additional installation holes.

The same base adapters used to replace the MELSEC-A series with the MELSEC iQ-R series are used.

Note

- Four additional installation holes (M5 screw size) and four M5 screws need to be prepared by the user to install the base adapter to the control panel. (There may be a case that drilling of additional installation holes is not required if the installation dimensions of all the four holes are the same before and after replacement.)

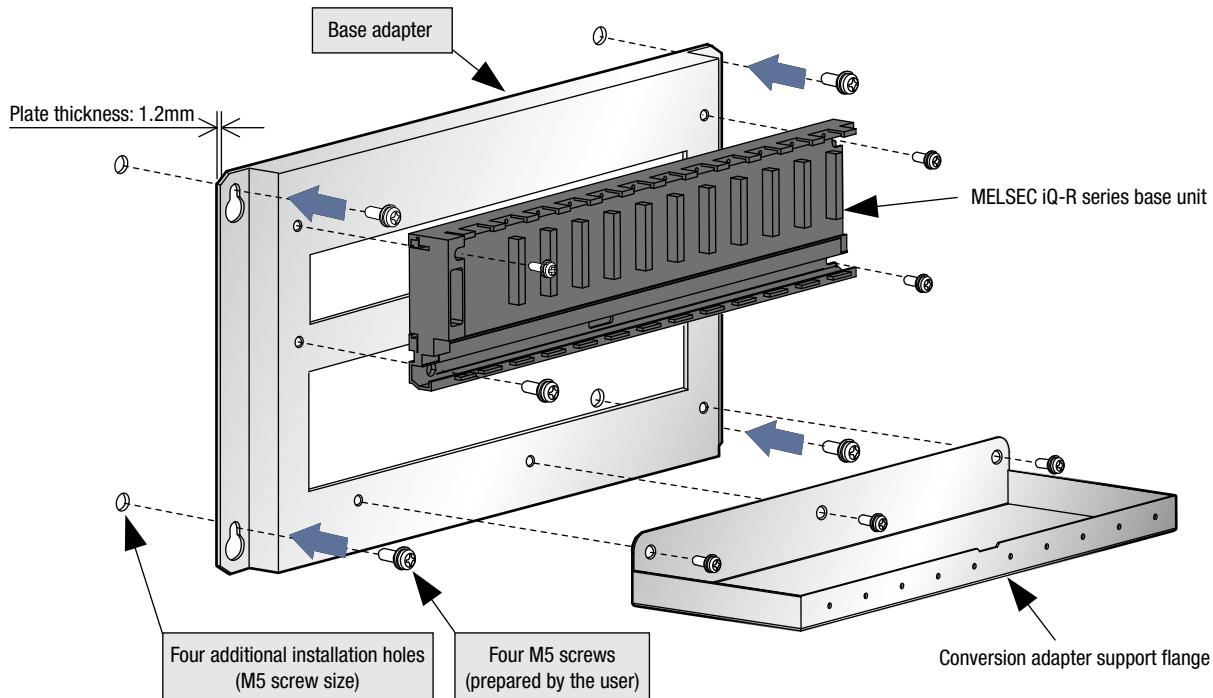

The base units (*1 to *3) can be installed to different types of base adapters. Select the optimum base adapter.

Base adapter model	Installable product					Dimensions	
	MELSEC iQ-R series base unit						
	12-slot	10-slot	8-slot	5-slot	3-slot		
ERNT-AQB38N	R312B					ERNT-1AR12F	
		R310B-HT				ERNT-1AR10F3	
			R38B ¹			ERNT-1AR8F	
ERNT-AQB35N			R38B ¹			ERNT-1AR8F	
				R35B		ERNT-1AR5F	
ERNT-AQB32N					R33B	ERNT-1AR5F	
ERNT-AQB68N	R612B					ERNT-1AR12F	
		R610B-HT				ERNT-1AR10F6	
			R68B ²			ERNT-1AR8F	
ERNT-AQB65N			R68B ²			ERNT-1AR8F	
				R65B ³		ERNT-1AR5F	
ERNT-AQB58N			R68B ²			ERNT-1AR8F	
ERNT-AQB55N				R65B ³		ERNT-1AR5F	