


Base adapters

Specifications

By using a base adapter, the MELSEC-Q series base unit and the conversion adapter support flange can be installed at the same time without drilling any additional installation holes. The same base adapters used to replace the MELSEC-A series with the MELSEC-Q series are used.

Note

- Four additional installation holes (M5 screw size) and four M5 screws need to be prepared by the user to install the base adapter to the control panel.

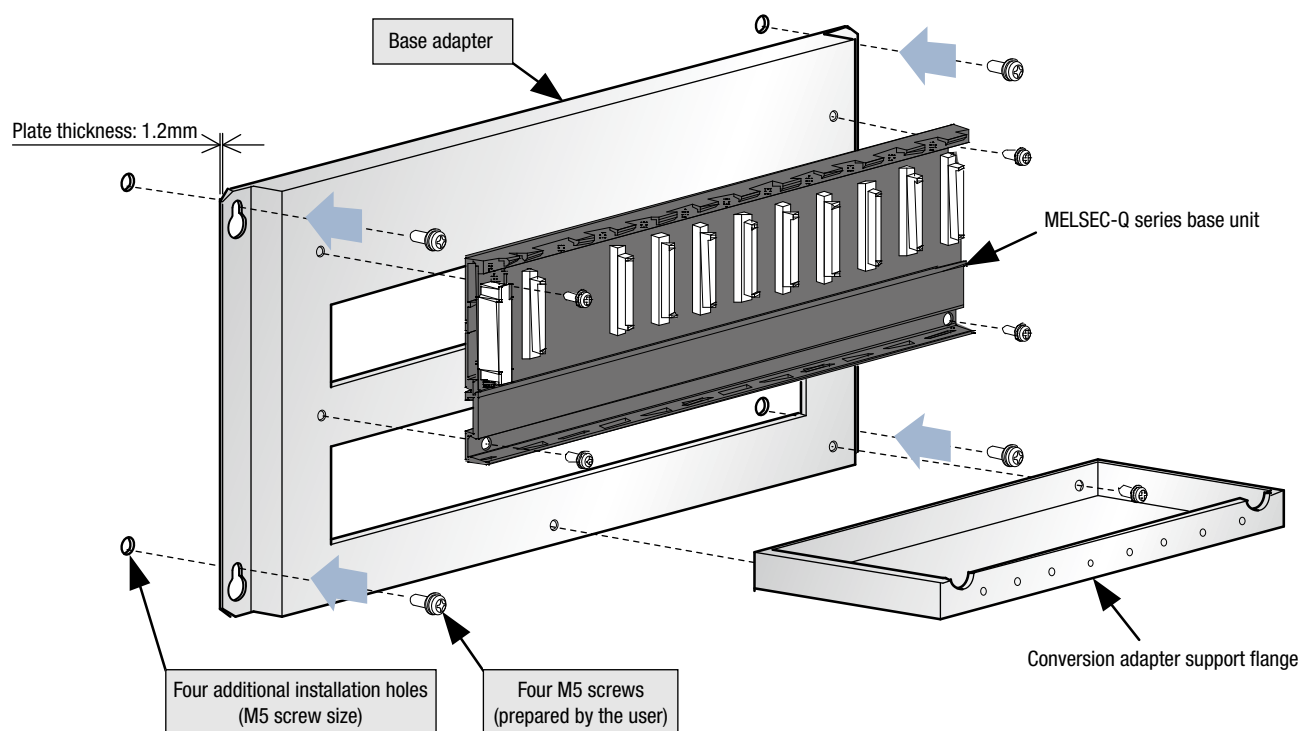

The base units (*1 to *5) can be installed to different types of base adapters. Select the optimum base adapter.

Base adapter model	Installable product					Conversion adapter support flange	Dimensions Width × Height (mm)
	12-slot	8-slot	5-slot	3-slot	2-slot		
ERNT-AQB38N	Q312B	Q38B ^{*1}				ERNT-AQF12, ERNT-AQF8 ERNT-AQF8	480 × 240
ERNT-AQB35N		Q38B ^{*1}				ERNT-AQF8, ERNT-AQF5 ERNT-AQF5	382 × 240
ERNT-AQB32N			Q35B	Q33B		ERNT-AQF3	247 × 240
ERNT-AQB68N	Q612B	Q68B ^{*2}				ERNT-AQF12, ERNT-AQF8 ERNT-AQF8	466 × 240
ERNT-AQB65N		Q68B ^{*2}	Q65B ^{*3} Q55B ^{*4}			ERNT-AQF8, ERNT-AQF5 ERNT-AQF5	352 × 240
ERNT-AQB62				Q63B	Q52B ^{*5}	ERNT-AQF3	238 × 240
ERNT-AQB58N		Q68B ^{*2}				ERNT-AQF8	411 × 240
ERNT-AQB55N			Q65B ^{*3} Q55B ^{*4}			ERNT-AQF5	297 × 240
ERNT-AQB52					Q52B ^{*5}	ERNT-AQF3	183 × 240